










 



Quickstart Guide



Basic Controls	
Speaker Volume Controls	 Hover to reveal volume slider, click to mute/unmute your computer's speaker.
Microphone Volume Controls	 Hover to reveal volume slider, click to mute/unmute your computer's microphone.
Zoom Controls	 Hover to reveal zoom level slider, click to reset.
Digital Pan/Tilt Top View	 While in top camera view, click and drag mouse to pan camera.
Pause Session	 Click to pause a session for up to 15 minutes.
Beam Out	 Click to end current session (while docked).
Screen Sharing - Start/Stop	 Click to select a screen to share, click again to end sharing session.
Fullscreen - Start/Stop	 Click to enable fullscreen mode, click again to restore to last window size.
Navigation View - Hide/Show	 Click to hide navigation view (while not driving). Click again to restore.
Beam Help	 Click to get assistance with using Beam.
Beam Options	 Click this to change your settings, input devices, and preferences.
View Connection Health	 Hover over this icon to view your current connection health (red indicates an issue).
Driving Controls	
Set Driving Speed	Drag the handle left (slow) or right (fast) to adjust the max speed 
Keyboard Controls	Press and hold the arrow keys or WSAD to start driving. Hold Shift to go faster.
Mouse Controls	Click and drag the mouse inside the navigation view (bottom) to drive. The guides will show your predicted path and rate of speed.
Gamepad Controls	Hold down the "drive" button and use the right control stick to begin driving. The speed is determined by how far you move the stick away from center.
Additional Information and Support	
Beam Online Documentation	www.suitabletech.com/documentation/
Beam Online Support	www.suitabletech.com/support/