




beam^{pro}™

BeamPro Battery Replacement

Required Tools

Scissors • Heavy Duty Suction Cup, Zip Tie

01. Power Down BeamPro
Power down the Beam using the power button at the back of the base.

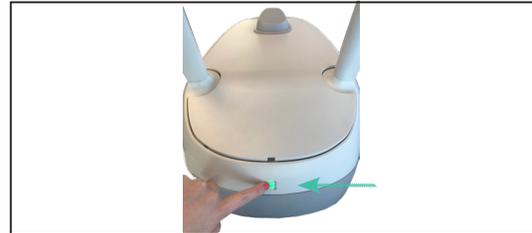

02. Remove Base Lid
Using the notch at the back of the base lid, lift to separate the lid from its base.




03. Disconnect Battery Cable
Disconnect the battery cable connector from the MCB.



04. Remove Tie Wrap
Using a knife or scissors, carefully cut the tie wrap positioning the battery cable.




05. Remove Wing Nuts
Remove 3x wing nuts and washers from the top of the battery casing.

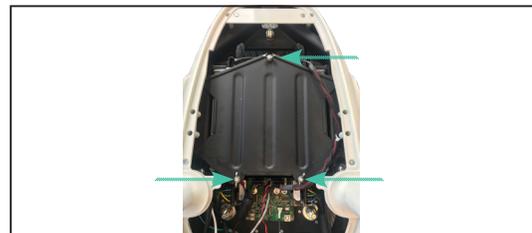


06. Remove Battery

Lift the battery out of the pocket. Consider using a heavy duty suction cup tool.

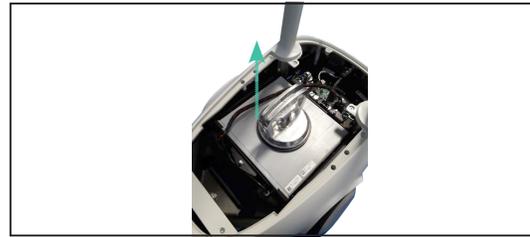


07. Displace Battery Cable

Ensure the battery cable is tucked safely out of the way prior to setting the new battery.

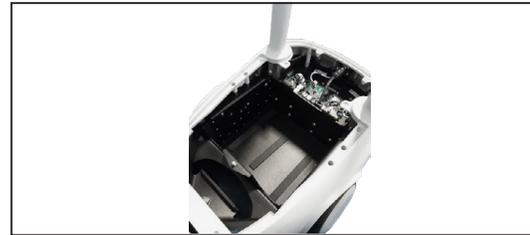


08. Install New Battery

Place the new battery into the pocket.

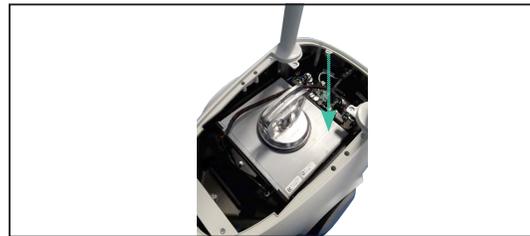

09. Replace Casing

Align the battery casing and reattach washers and wing nuts.

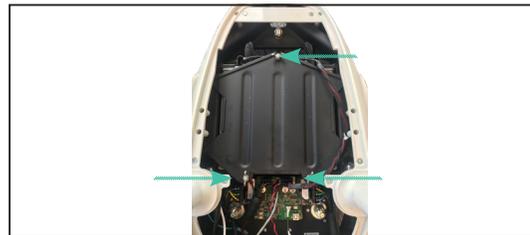


10. Reconnect Battery Cable

Connect the battery cable to the motor controller board.



11. Fasten Tie Wrap

Using a zip tie, secure the battery cable to the post.

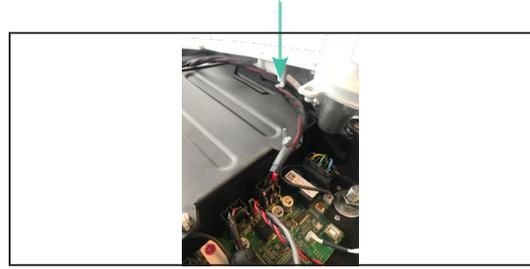

12. Replace Base Lid

Reattach the base lid. Be sure to reconnect any cables that may have been disconnected or loosened throughout the replacement process.



13. Power On the BeamPro

Power on the BeamPro using the power button at the back of the base.

