

beam®

Beam+ Battery Replacement

Required Tools

Long Arm M4 Allen Wrench or 4 mm Hex Tool • Scissors • 3 Zip Ties
Recommended: 1 Helper • Original Foam Packing

01. Prep your Beam

Power down the Beam's head using the power button to the left of the face.



02. Prep your Workspace

Gently lay the Beam on its face to expose the bottom of the unit. Consider using the original Beam packing foam to protect the Beam's head and stabilize the base.



03. Remove Base Screws

Using an M4 allen wrench, remove all 13 screws on the bottom of the base.




04. Reposition the Beam

While supporting the neck and base, return the Beam to an upright position.



05. Expose Wiring

Carefully lift head and stem away from the base to access the wiring.

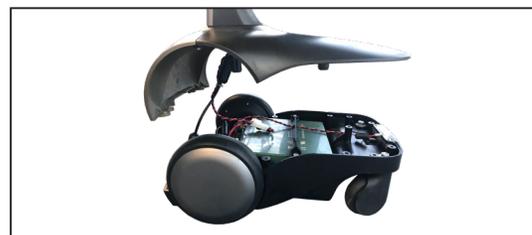

06. Cut Ties

Ask a helper to carefully cut all zip ties.



07. Disconnect Cables

Disconnect the power cable connector and USB cables to release the head and stem from the base.




08. Remove Battery Strap

Release the two screws holding the battery strap.




09. Disconnect Cables

Disconnect battery and charger power cables.

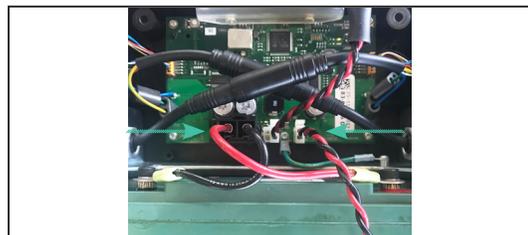

10. Extract Battery

Lift the battery up and out of the battery pocket.

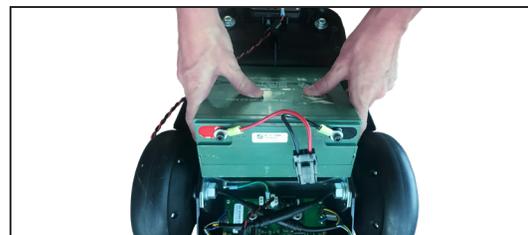

11. Repeat

Repeat steps 1-10 in reverse to connect your new battery.